



For Both Analog and Digital (C) Load Sharing and Auto-Synchronizer.

Typical Wiring Diagram When Using a (C) Rated DYNA Controller, a (C) Rated DYN2-80120 Analog Series ILS Control and a (C) Rated DYN2-90300 Auto-Synchronizer.

DYNA II Analog ILS and Digital Auto-Synchronizer.

The DYNA II Auto-Synchronizer (P/N DYN2-90300) can be used with a CE rated DYNA governor and a CE rated DYNA II Isochronous Load Sharing Control to automatically synchronize one generator with another or with a bus. The Auto-Synchronizer eliminates the risk of operator error inherent with manual synchronizing.

Figure 1 illustrates the wiring of two engine generator sets having CE rated DYNA governors, DYNA II Analog Isochronous Load Sharing Controls and DYNA II Auto-Synchronizers. Additional engine generator sets can be paralleled by wiring them at the point designated, **PARALLELING LINES TO OTHER SYSTEMS.**

-Caution-
It is recommended that an independent overspeed device be incorporated in every engine control system.

Notes For Auto-Synchronizer (Also see F-23448)

- 1a. Closing a contact between 12 to 13 allows the Auto-Synchronizer to perform as a speed matching unit. The speed and phase of the incoming generator are controlled and a contact is closed to drive a circuit breaker. Once the circuit breaker is closed, the contact between 12 and 13 should be opened. Another method would be to use the "Output Hold" dip switch, SW1, on the front of the unit.
- 1b. Open contacts or no jumper from 12 to 13 allows the Auto-Synchronizer to still sense any error, but it does not provide any control or contact closure.

2. Phasing of voltage potential to the Auto-Synchronizer is necessary to keep each signal in its correct phase relationship. If the generator voltage is not the same as the voltage rating of the Auto-Synchronizer, step-down transformers are required. The step-down transformers require a nominal 7 VA/PHASE for the Generator input and 2 VA/PHASE for the Bus input.
3. Connections to terminals 1-3 or 2-3 and 4-6 or 5-6 of the Auto-Synchronizer must be the same voltage potential. Applying generator voltage without applying bus voltage may cause the engine to run faster or slower than the desired speed. However, when bus voltage is applied, the Auto-Synchronizer will change engine speed to quickly match the generator to the bus frequency.

For 230 VAC operation, use terminals 4 & 6 for GEN, 1 & 3 for BUS.

For 115 VAC operation, use terminals 5 & 6 for GEN, 2 & 3 for BUS.

General System Notes

4. Power switch current rating for a DYNA Governor System is 15 amperes.
5. If more than one engine is started using the same battery supply, use a separate battery supply for the DYNA system.
6. If each generator has a separate power supply, connect the negative of all power supplies together for a common reference.
7. Use shielded and twisted leads as shown.

Notes For Isochronous Load Sharing Module (Also see F-16892)

8. Select the ILS current transformers to provide 2.5 to 5.0 amperes at full rated load. Current transformers require nominal 12.5 VA/PHASE at 5.0 amperes.
9. Step-down potential transformers require a nominal 6 VA/PHASE for the ILS.
10. Observe current and potential transformer markings when wiring system because it is necessary to keep each signal in its correct phase relationship to each other.
11. Ramp switch and connections to terminal 20 and 21 of ILS are required only on DYN2-80121 and DYN2-80125.
12. Ramp switch may be an oil pressure, water temperature or manual switch. Closing the switch starts the ramping function. Opening the switch during or after ramping is completed returns the engine to idle speed.
13. Standard "ramp time" is adjustable from 0.5 to 10 seconds. This time can be increased by connecting a 180 mfd (25 Vdc) between terminals 13 and 19 on the ILS. Capacitor should be a Sprague Type 137D, GE Type 69F, CDE Type TX 67 or equivalent.
14. If the ramp generator function is not being used, set the "idle speed" potentiometer fully clockwise and the "ramp time" potentiometer fully counterclockwise. It is not necessary to connect power to terminal 21 of ILS.
15. If the "load pulse" function is not being used, set the "load pulse" potentiometer fully counterclockwise.
16. Droop/Isochronous switch is not required if the system is always operated in the isochronous mode.


-NOTE-

On all CE rated products, the shields are connected to a designated ground screw located on the product and the products are connected to the chassis ground through the mounting screws. Wire all CE products according to the Barber-Colman wiring diagrams (Figures 1 and 2.)

Remote Speed Potentiometer - DYNS-10000

Shielded Cable - should be purchased from Barber-Colman or customer should purchase a cable with a wrapped mylar supported aluminum foil shield with a drain wire.

Typical Wiring Diagram When Using a CE Rated DYNA Controller, a CE Rated DYN2-80120 Series ILS Control and a CE Rated DYN2-90300 Auto-Synchronizer

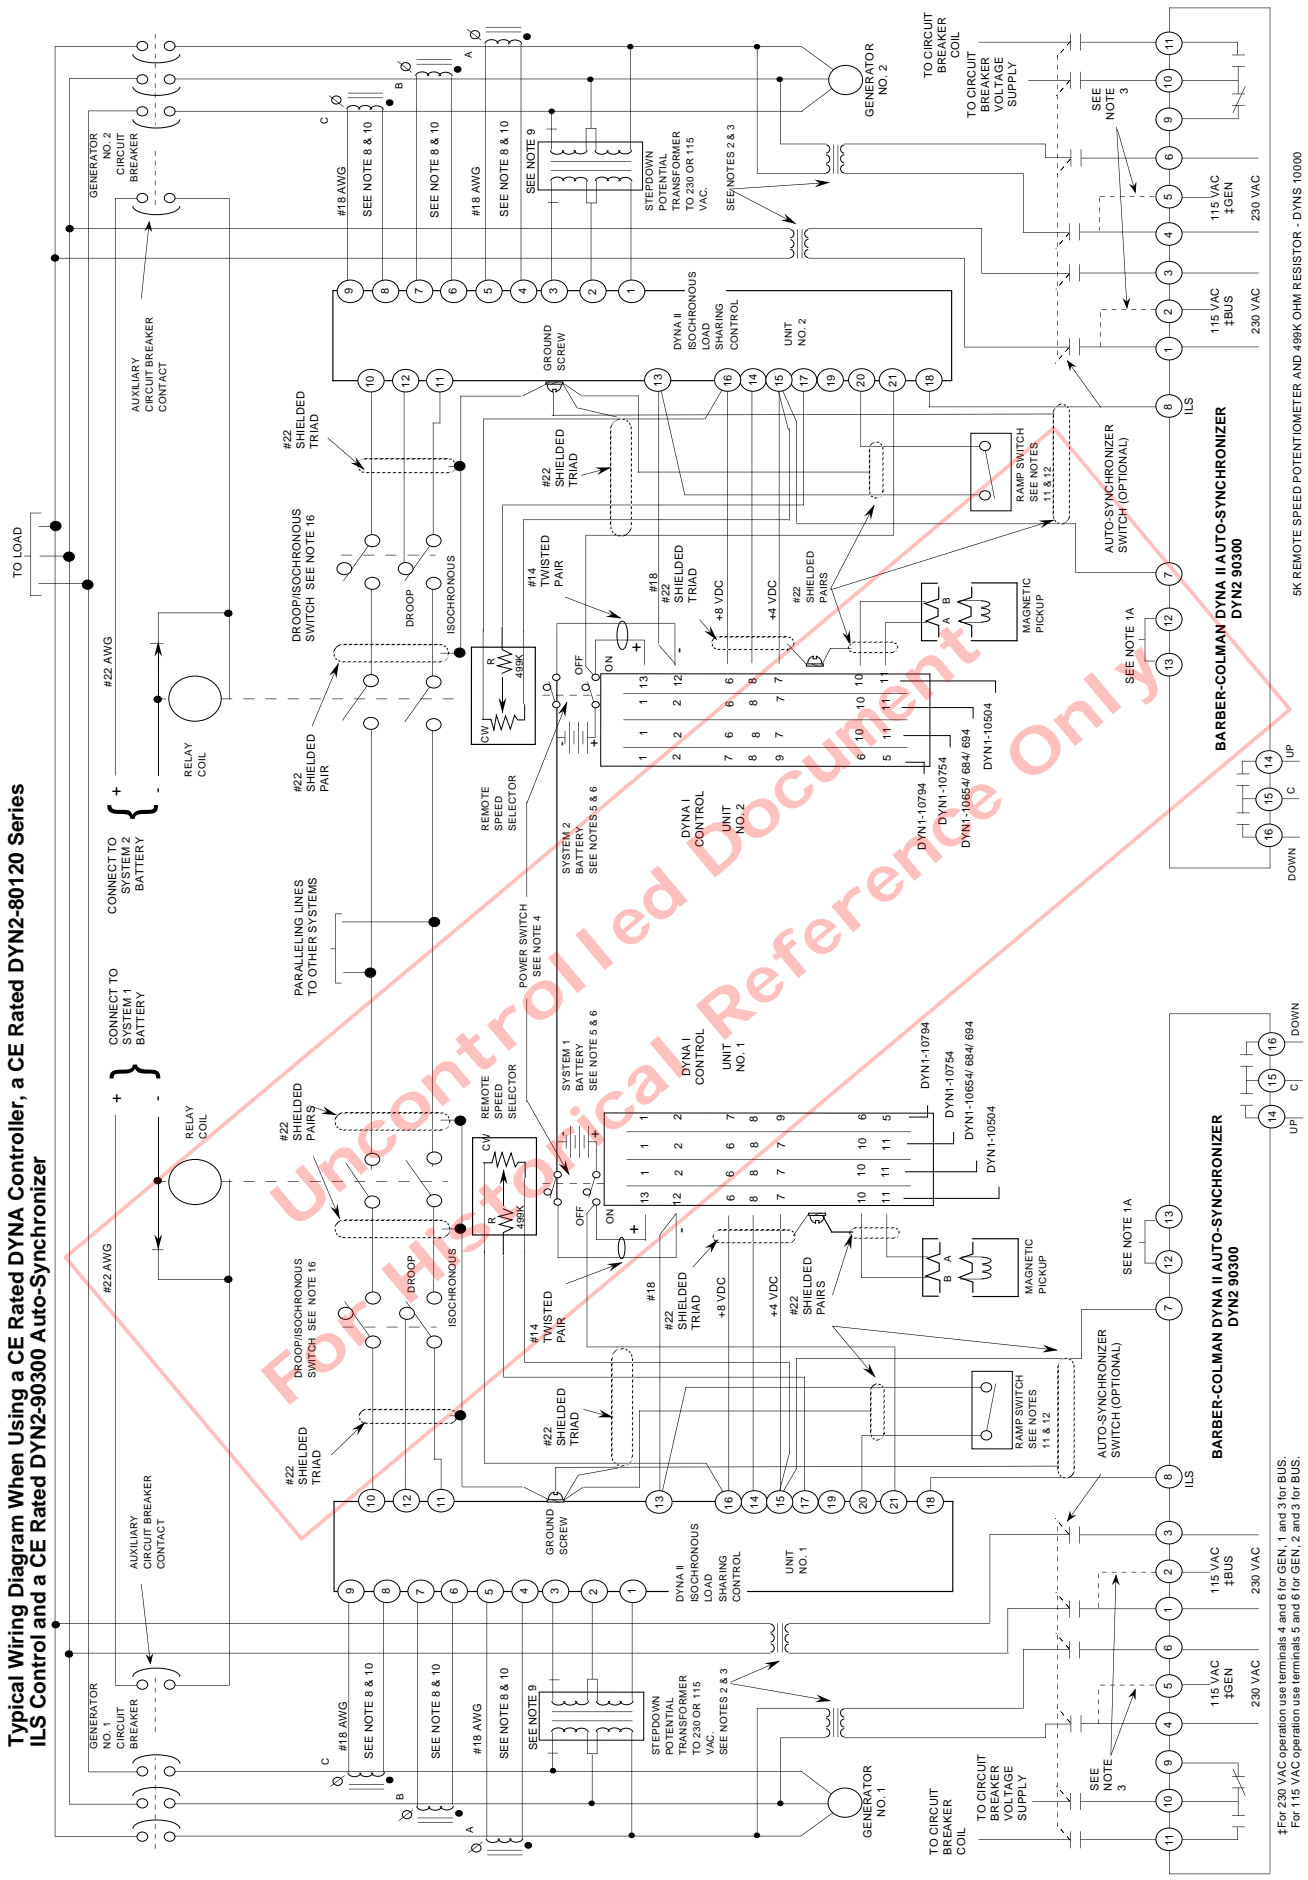

5K REMOTE SPEED POTENTIOMETER AND 499K OHM RESISTOR - DYN5 10000

FIGURE 1

CE — NOTE —

When wiring a system with CE rated components, the shield terminations are to be connected to chassis ground.

*For 230 VAC operation use terminals 4 and 6 for GEN. 1 and 3 for BUS.
For 115 VAC operation use terminals 5 and 6 for GEN. 2 and 3 for BUS.

Typical Wiring Diagram When Using a CE Rated DYNA Controller, a CE Rated DYN2-80108/80109 Digital Series ILS Control, and a CE Rated DYN2-90300 Auto-Synchronizer

DYNA II Digital ILS and Digital Auto-Synchronizer.

The DYNA II Auto-Synchronizer (P/N DYN2-90300) can be used with a CE rated DYNA governor and a CE rated DYNA II Digital Isochronous Load Sharing Control to automatically synchronize one generator with another or with a bus. The Auto-Synchronizer eliminates the risk of operator error inherent with manual synchronizing.

Figure 2 illustrates the wiring of two engine generator sets having CE rated DYNA governors, DYNA II Digital Isochronous Load Sharing Controls and DYNA II Auto-Synchronizers. Additional engine generator sets can be paralleled by wiring them at the point designated, **PARALLELING LINES TO OTHER SYSTEM.**

Notes

1. If more than one engine is started using the same battery supply, use a separate battery supply for each system. Twist power leads as shown. Use shielded leads as shown.
2. Select current transformers to provide 2.5 to 5.0 amps at full rated load. Current transformers require nominal 0.32 VA/PHASE at 2.5 amps; 1.25 VA/PHASE at 5.0 amps.
3. Observe current transformer polarity markings when connecting.
4. Power switch current rating for a DYNA Governor System is 15 amperes.
5. Phasing of potential to Terminals 1, 2, and 3 is necessary to keep each signal in its correct phase relationship. If the generator voltage is not the same as the voltage rating on Terminals 1, 2, and 3 of the Isochronous Load Sharing Control, a step-down transformer is required. Correct phasing of the transformer leads is necessary. Step-down transformers require nominal 1 VA/PHASE.
6. Droop/Isochronous switch is not required if units are always operated in the Isochronous mode.
7. Digital ILS - (Also see F-22396A)
DYN2-80108 - 115/230 VAC input, 50/60 Hz
DYN2-80109 - 230/480 VAC input, 50/60 Hz
DYN2-80110 - 230/480 VAC input, 400 Hz
8. If "Load Pulse" function is not being used, the "Load Pulse" Potentiometer must be set fully counter-clockwise.

Notes for Auto-Synchronizer (Also see F-23448)

- 9a. Closing a contact between 12 to 13 allows the Auto-Synchronizer to perform as a speed matching unit. The speed and phase of the incoming generator are controlled and a contact is closed to drive a circuit breaker. Once the circuit breaker is closed, the contact between 12 and 13 should be opened. Another method would be to use the "Output Hold" dip switch, SW1, on the front of the unit.
- 9b. Open contacts or no jumper between 12 and 13 allows the Auto-Synchronizer to still sense any error, but it does not provide any control or contact closure.
10. Phasing of voltage potential to the Auto-Synchronizer is necessary to keep each signal in its correct phase relationship. If the generator voltage is not the same as the voltage rating of the Auto-Synchronizer, step-down transformers are required. The step-down transformers require a nominal 7 VA/PHASE for the generator input and 2 VA/PHASE for the bus input.
11. Connections to terminals 1-3 or 2-3 and 4-6 or 5-6 of the Auto-Synchronizer must be the same voltage potential. Applying generator voltage without applying bus voltage may cause the engine to run faster or slower than the desired speed. However, when bus voltage is applied, the Auto-Synchronizer will change engine speed to quickly match the generator to the bus frequency.

Shielded Cable - should be purchased from Barber-Colman or customer should purchase a cable with a wrapped mylar supported aluminum foil shield with a drain wire.

For 230 VAC operation, use terminals 4 & 6 for GEN, 1 & 3 for BUS.

For 115 VAC operation, use terminals 5 & 6 for GEN, 2 & 3 for BUS.

Typical Wiring Diagram When Using a CE Rated DYNA Controller, a CE Rated DYN2 Digital ILS Control and a CE rated DYN2 90300 Auto-Synchronizer

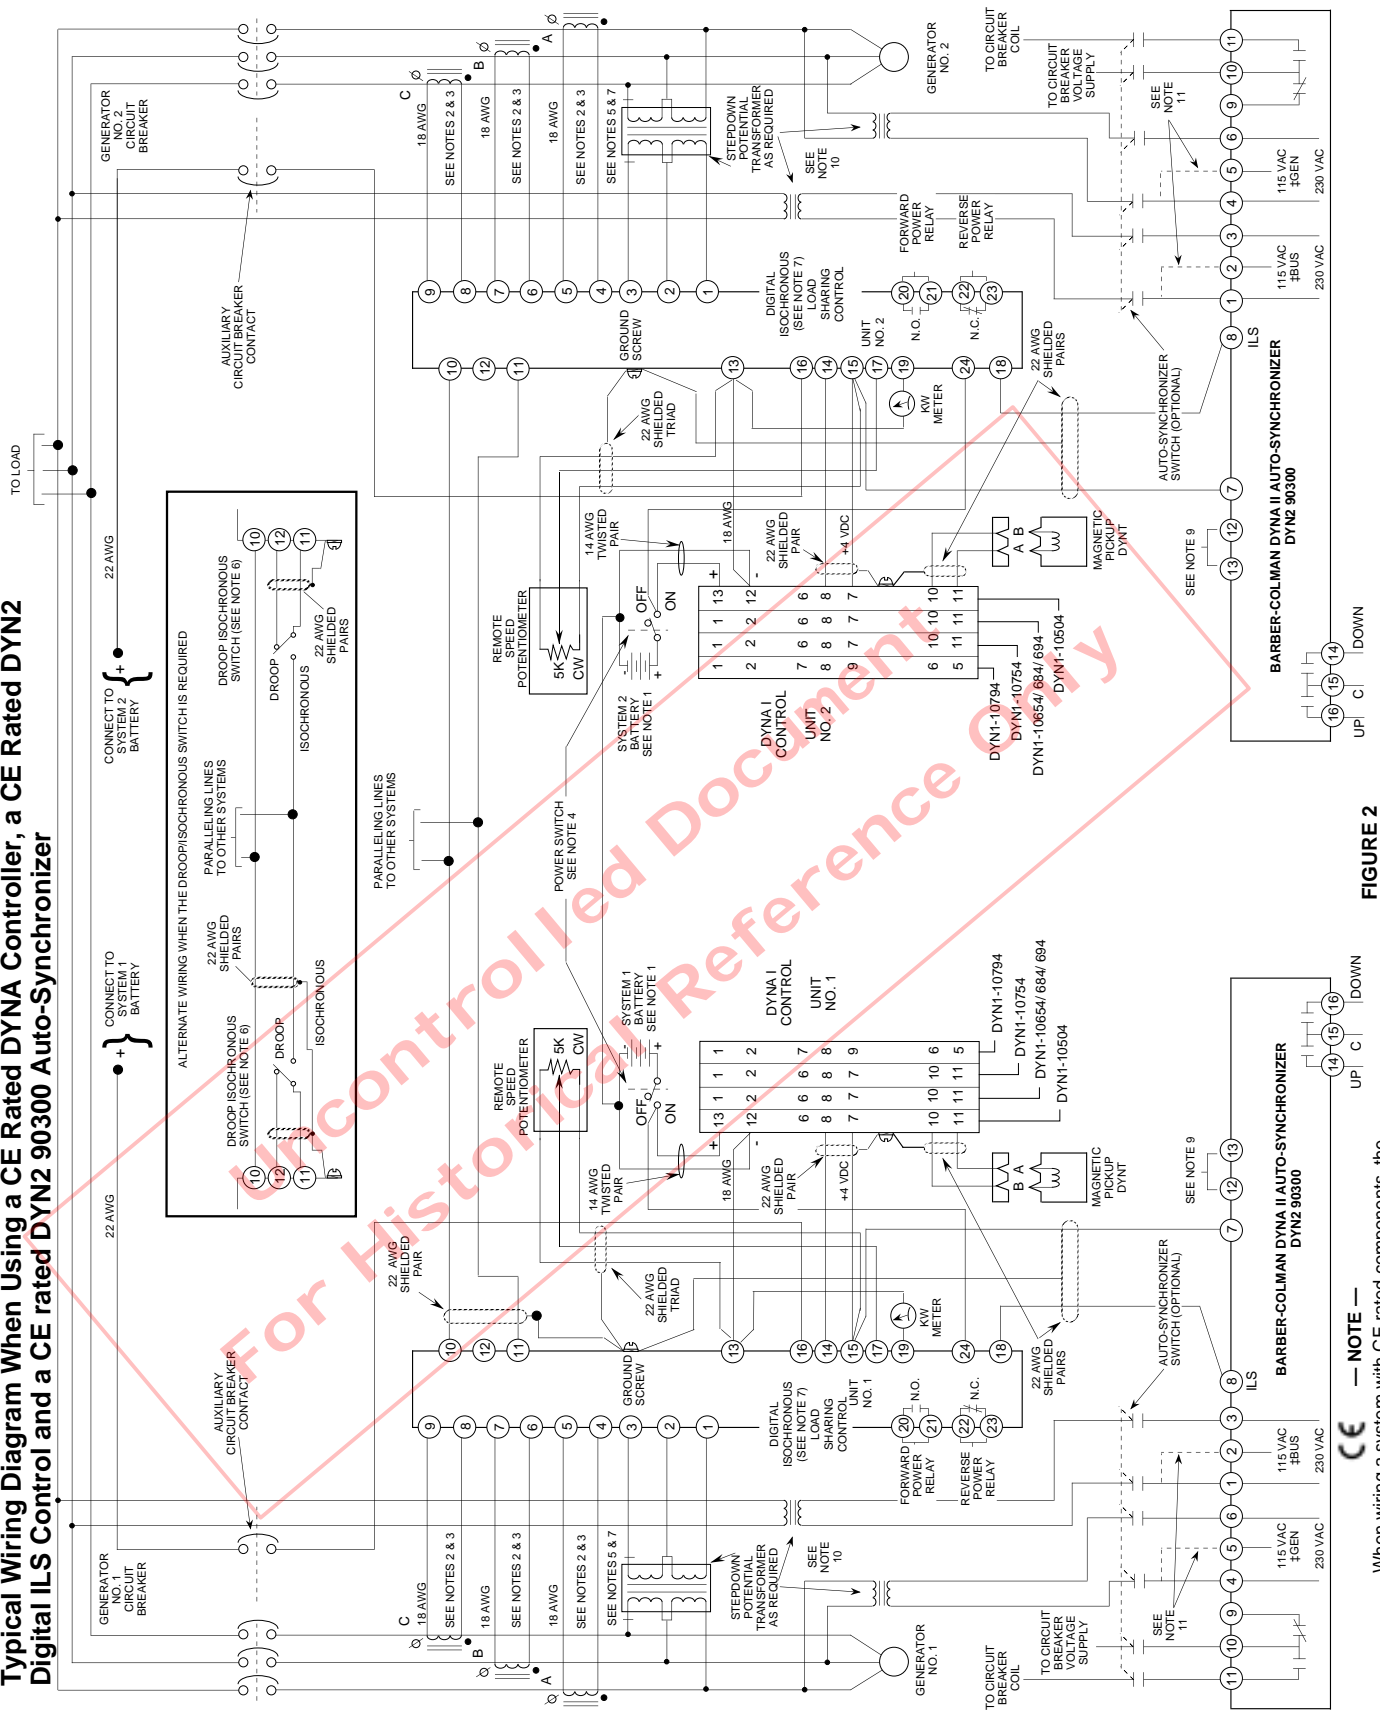


FIGURE 2

CE — NOTE —

When wiring a system with CE rated components, the shield terminations are to be connected to chassis ground.

NOTE

Barber-Colman believes that all information provided herein is correct and reliable and reserves the right to update at any time. Barber-Colman does not assume any responsibility for its use unless otherwise expressly undertaken.

CAUTION

As a safety measure, the engine should be equipped with an independent overspeed shutdown device in the event of failure which may render the governor inoperative.

NOTE

On all CE rated products, the shields are connected to a designated ground screw located on the product and the products are connected to the chassis ground through the mounting screws. Wire all CE products according to the Barber-Colman wiring diagrams (Figures 1 and 2.)

Uncontrolled Document
For Historical Reference Only

Barber-Colman Company DYNA Products

1354 Clifford Avenue (Zip 61111) Telephone (815) 637-3000
P.O. Box 2940 Facsimile (815) 877-0150
Loves Park, IL 61132-2940 www.dynaproducts.com
United States of America

In Europe contact: Barber-Colman GmbH

Am Neuen Rheinhafen 4, D-67346 Speyer, Germany
Telephone (49) 6232 29903, Facsimile (49) 6232 299155
email:

In Japan contact: Ranco Japan Ltd.

Shiozaki Bldg. 7-1, 2-chome, Hirakawa-Cho, Chiyoda-Ku
Tokyo 102, Japan
Telephone (81) 3 3261 4293, Facsimile (81) 3 3264 4691

An Invensys Company